

Product Information DPM
CONTROLS

Universal Digital Indicator DPM 4-digit

Application/specified usage

- Machine and switch cabinet construction
- Indicating and transforming of process values
- Available inputs: current/voltage, Pt100 or potentiometer signals

Application examples

- Realising a small process controlling
- In-situ indication of process parameters
- Pt100 temperature transmitter with integrated display

Features

- Protection class IP65 front side
- Completely programmable via key pad
- Integrated sensor supply
- Unit symbol changeable (illuminated)

Options

- Alarm modul: 2 or 4 alarm relays available
- Analog output: (0/4...20 mA, 0...10 V DC)

Authorizations

Digital indicator DPM-PT


Specification		
Housing	control board mounting	96 mm x 48 mm x 130 mm, 2 side mounting clips
Panel cut-out	(W x H)	92.5 mm x 45 mm, tolerance +0.5 mm
Protection class	front/rear	IP65/IP20
Ambient	operation temperature storage temperature humidity	0...50 °C / 32...122 °F -20...70 °C / -4...158 °F 0...95 % no condensation
Input	Pt100 current/voltage potentiometer	-200.0...600.0 °C 0/4...20 mA (R _i = 50 Ω), 0...1 V, 0...10 V (R _i = 50 kΩ) min. 0...100 Ω max. 0...10 kΩ
Accuracy		0.1 % (0.5 % for 0...10 V) ±1 digit, 15 bit
Display	7-segment	-1999...+9999; height: 13 mm
Sensor supply	short-circuit proof	ca. 20 V DC, maximum 30 mA
Supply voltage	DPM/.../230 V AC DPM/.../24 V DC Rated voltage Insulation voltage	50 Hz...60 Hz, max. 7 VA 20 V...30 V, max. 7 W 250 V AC 3000 V AC, CAT II
Alarm outputs	option -2GW or -4GW	250 V/3 A AC changeover contacts hysteresis and switching function adjustable
Analog output	option -SA option -SPA	current 0/4...20 mA, 12 bit resolution, maximum 500 Ω burden voltage 0...10 V
Weight		maximum 500 g

Warnings | Electrical connection



Details: Non observance of this warning notice may cause troubles.



Danger: Non observance of this warning notice may cause serious injury of persons and/or damages or destruct the unit.



Information/Tip: This symbol indicates useful additional informations.

Global safety instructions



- Mounting, electrical connection, set up and maintenance of the unit must be done by trained and skilled personnel. They must have read and understood these installation and operating instructions. They must follow them carefully.
- Do not use the product where flammable or combustion gases are present.
- The product has been designed for industrial areas and must be used in an installed condition. (See assembly instructions)
- This product is not a safety device. Product failure may prevent operation of outputs. Take safety measures, such as installing a separate monitoring system, to ensure safety and to prevent serious accidents caused by such failure, thus ensuring safety.
- Do not open the housing, there are no serviceable parts inside. Inside are high voltage circuits.

Note on CE



- Applicable guidelines:
 - Electromagnetic Compatibility Directive 2014/30/EU
 - Low Voltage Directive 2014/35/EU
- The accordance with applicable EU-guidelines is confirmed with CE-labeling of the device.
- You have to guarantee the compliance of all guidelines applicable for the entire equipment.


Assembly instructions




The DPM is designed for mounting into a front panel.

1. Introduce the necessary aperture (WxH: 92.5 mm x 45 mm, tol. +0.5 mm) in your front panel.
2. Insert the display into the prepared aperture from the front.
3. Attach the supplied retainer clips on both sides.
4. Secure the clips on the front panel and check that the display is firmly seated.
5. Supply: Rated voltage 250 V AC, insulation voltage 3000 V AC.
6. Switch outputs: Rated voltage 250 V AC, insulation voltage 3000 V AC.
7. The device is only suitable for installation in stationary and weather-protected switch cabinets and housings. Ensure that all lines and connectors are de-energized during installation.
8. The building equipment must feature an electrical disconnect device such as a switch or circuit breaker in an accessible location and labeled as a disconnect for this device. This disconnect device must be able to disconnect from the device all cables conducting line power.
9. The external fuse is specified at 1 A.


Electrical connection DPM-PT

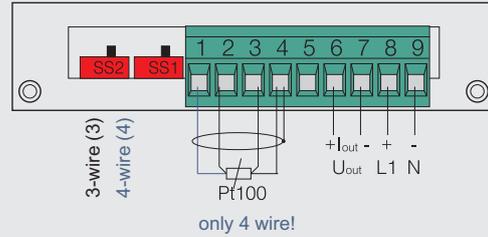


Electrical connection DPM-P

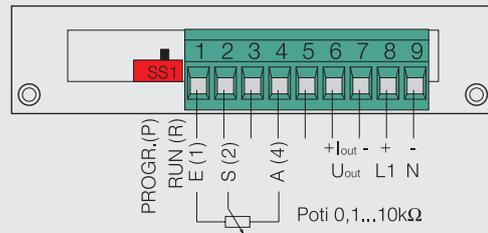


Electrical connection DPM-GS

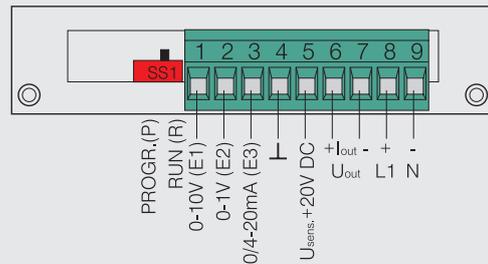

Connection of the optional alarm outputs

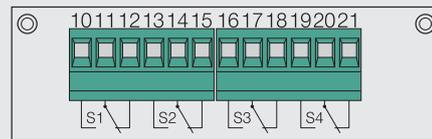

Control elements

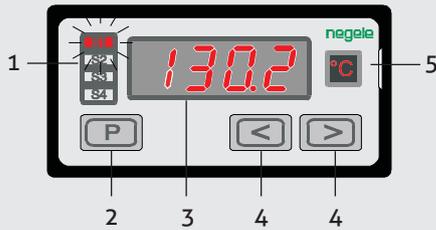


- 1: Status indicators for optional alarm relays
- 2: Program/enter button
- 3: Indicator
- 4: Increase/decrease buttons
- 5: Unit indicator (sidewise insertable behind display frame)

Information




If "Loc" is displayed while pressing the **P** -button, set the sliding switch SS1 on the back to "Progr." to unlock the parameter setting.

PAGE-Selection

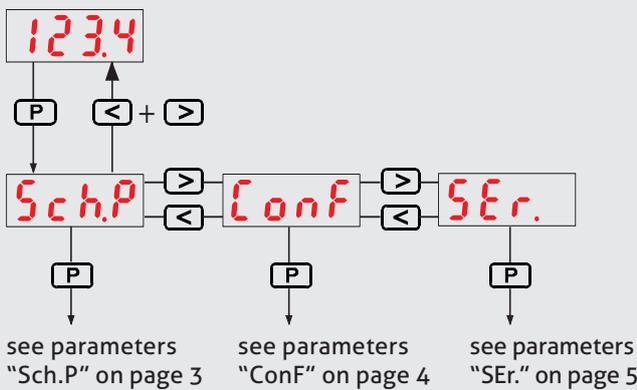


Change parameters

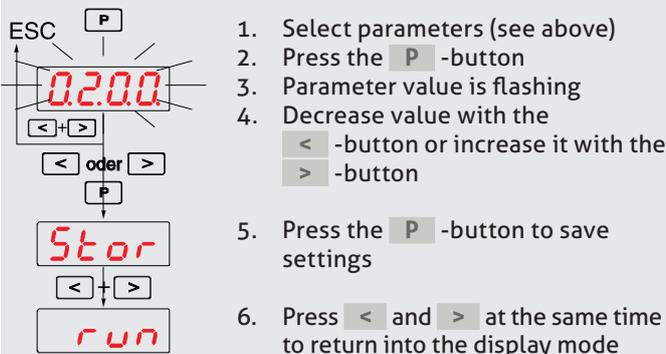


1. Select parameters (see above)
2. Press the **P** -button
3. Parameter value is flashing
4. Decrease value with the **<** -button or increase it with the **>** -button
5. Press the **P** -button to save settings
6. Press **<** and **>** at the same time to return into the display mode

List of parameters on PAGE switching point (Sch.P)

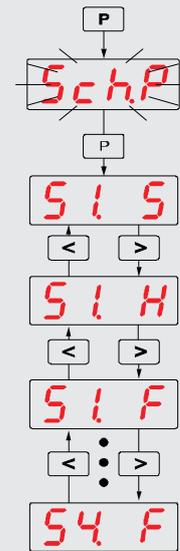


1. Press **P** -button you see the PAGE "Sch.P"
2. Press **P** -button
3. S1 switching point for alarm relay
4. S1 Hysteresis: Difference between relay ON and relay OFF
5. S1 switching function of the alarm relay S1
 0 = OFF if value **higher** (max. inv.)
 1 = OFF if value **lower** (min. inv.)
 2 = ON if value **higher** (max.)
 3 = ON if value **lower** (min.)
6. Referring to this the parameters of the alarm relays S2...S4 can be adjusted

Switching functions as diagram

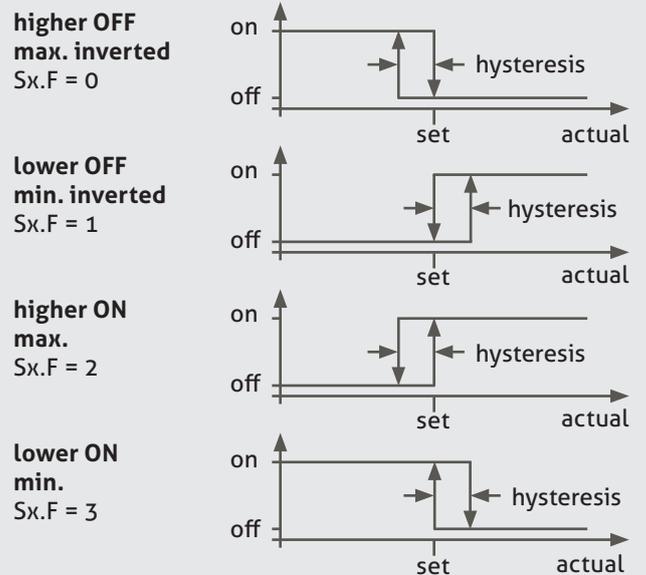

Displaying an alarm value (S1...S4)

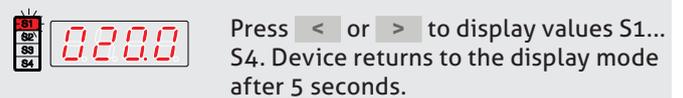

Fast Setting an alarm value (S1...S4)

1. Select an alarm value (see above)
2. Hold button **P** pressed and change the value with **<** or **>**

Parameter list on PAGE (ConF) for DPM-GS / -PT

press **P** with **>** change to page "Conf". (see PAGE-Selection)

press **P** -button

S.InP
0...20 mA/4...20 mA/0...1 V/0...10 V

A.dP
Display decimal point (*1)
none (1111)/1. place (111.1)
2. place (11.11)/3. place (1.111)

R.A.n
Display LO (*1)
displayed value if input
0/4 mA respectively 0 V

R.E.n
Display HI (*1)
displayed value if input
20 mA respectively 1/10 V

R.oFF
Display Offset
zero offset e.g. for wire compensation
of Pt100 with 2-wire-connection

Int.t
Integration time (*2)
0...60 seconds (affects display,
switching points and analog output)

S.A.b
Signal output range
(only option -SA / -SPA)
0 = 0...20 mA/0...10 V
1 = 4...20 mA

S.A.A.n
Signal output LO
(only option -SA / -SPA)
display value to output
0/4 mA/0 V

S.A.E.n
Signal output HI
(only option -SA/-SPA)
display value to output
20 mA/10 V

b.E.C.F
Service configuration
fast changing of alarms
0 = protected, 1 = possible

A.E.Y
Codeprotection
access to parameter values only by
means of code "6090"
0 = access without code
1 = code protection

r.A.t.E
Updating of measurement value
0 = updating every 0.25 seconds
1 = updating every 0.08 seconds

*1 = Not with input Pt100 (DPM-PT...)
*2 = Parameter is only displayed if "rAtE" is "1"

Parameter list on PAGE (ConF) for DPM-P

press **P** with **>** change to page "Conf". (see PAGE-Selection)

press **P** -button

r.A.n.F
Poti initial value in Ohm
Resistance between initial- and slider
value when slider in initial position

r.S.C.h
Poti slider value
Resistance which is used by the slider

r.E.n.d
Poti final value
Resistance between final- and slider
value when slider in final position

A.d.P
Display decimal point (*1)
none (1111)/1. place (111.1)
2. place (11.11)/3. place (1.111)

R.A.n
Display LO
displayed value when slider in initial
position

R.E.n
Display HI
displayed value when slider in final
position

R.oFF
Display Offset
zero offset
(1999...+5000)

Int.t
Integration time (*2)
0...60 seconds (affects display,
switching points and analog output)

S.A.b
Signal output range
(only option -SA/-SPA)
0 = 0...20 mA/0...20 V
1 = 4...20 mA

S.A.A.n
Signal output LO
(only option -SA/-SPA)
display value to output
0/4 mA/0 V

S.A.E.n
Signal output HI
(only option -SA/-SPA)
display value to output
20 mA/10 V

b.E.C.F
Service configuration
fast changing of alarms
0 = protected, 1 = possible

A.E.Y
Codeprotection
access to parameter values only by
means of code "6090"
0 = access without code
1 = code protection

r.A.t.E
Updating of measurement value
0 = updating every 0.25 seconds
1 = updating every 0.08 seconds

*1 = Not with input Pt100 (DPM-PT...)
*2 = Parameter is only displayed if "rAtE" is "1"

Information



All parameters on PAGE Service "SEr." are protected through the code "4095" against changing by mistake. Enter code "4095" to overwrite password protection.

Parameter list on PAGE (SEr.)

  	<p>Select PAGE "SEr." (see PAGE-Selection)</p>
  	<p>Device preset 0 = no function 1 = set device to factory setting (Error message E.80 will be cleared)</p>
  	<p>Program name Indicating the program name No settings available</p>
  	<p>Program release Display the version number No settings available</p>
  	<p>Options Display the option code 00...FF (hex) No settings available</p>
  	<p>LED Unit array 0 = Unit array illuminating off 1 = Unit array illuminating on</p>
  	<p>Temperature unit (only DPM-PT) 0 = Deg. Celsius (-200.0...+600.0 °C) 1 = Deg. Fahrenheit (-328.0...+999.9 °F) Attention! Fahrenheit equals -200...+537.7 °C</p>
  	<p>Monitoring input (only DPM-GS) 0 = Monitoring deactivated 1 = 3,5 mA monitoring active 2 = 22 mA monitoring active 3 = 3.5 and 22 mA monitoring active</p> <p>If value is outside the monitoring area, error "F.EIn" will be displayed (see troubleshooting).</p>

Error codes

If more than one error occurs at the same time, they will be added.

Example:

E A1 means Error 80/20/01 occurs at the same time.

Troubleshooting


Supply voltage

Supply voltage was at least 20 % below.

Reaction: Relais off/analog output: 0 V/0 mA

Correction: Check supply voltage.


Error overflow display > 9999

Wrong scaling/input too high or reverse poled.

Correction: Correct scaling, check input signal.


Error underflow display < 9999

Wrong scaling/input too low or reverse poled.

Correction: Correct scaling, check input signal.


Error sensor (only DPM-PT)

Sensor broken, short circuit

Reaction: Relais off/
analog output: 0 V/0 mA

Correction: Check sensor and wiring.


Error input

Measurement range min. 100 % overloaded

Reaction: Relais off/
analog output: 0 V/0 mA

Correction: Check measurement range.


Error input

Error monitoring input active (as in parameter "Err.E" in Page "SEr." activated)

Reaction: Relais off/
analog output: 0 V/0 mA

Correction: Check sensor and wiring.


Error

An internal error occurred.


Error number will be displayed.

Correction: See error code list below.


Error code list

- **01 Device identification has changed**
Correction: Device defect -> send back
- **02 Error during reading the EEPROM**
Correction: Device defect -> send back
- **20 Error at calibration data**
Correction: Device must be calibrated -> send back
- **80 Error at parameter list**
Correction: Enter parameter new

Temperature measurement with two wire transformer e.g. TSB with integrated transmitter

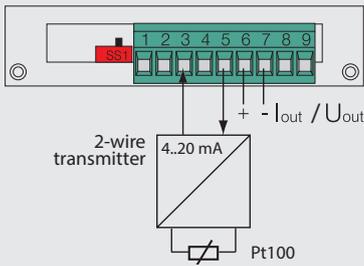

Temperature measurement with Pt100 e. g. with TSB

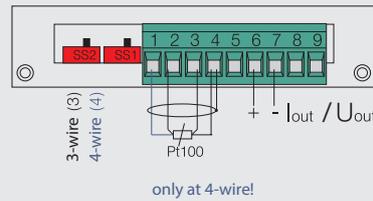

Connection:	see page 2
Adjustment:	4...20 mA = -10...140 °C
Analog output:	0...20 mA = 0...100 °C
Relais:	10 °C, 90 °C, hysteresis 5 °C

The transmitter will be supplied through the sensor supply terminal 5 on the DPM.

Page: ConF

S.InP	4-20	Signal input 4...20 mA
A.dP	111.1	Decimal point on digit
A.An	-10	Displayed value by 4 mA
A.En	140	Displayed value by 20 mA
A.oFF	0	Display offset

End, if no output is needed.

SA.b	0	Output 0...20 mA
SA.An	0	Displayed value by 0 mA
SA.En	100	Displayed value by 20 mA

End, if no relays are needed.

Page: Sch.P

SI.S	10	Switching point 10 °C
SI.H	5	Hysteresis 5 °C
SI.F	0	Relay off if value is higher


Repeat the steps at Page Sch.P for each switching point.

Connection:	see page 2
Adjustment:	Pt100 temperature measurement
Analog output	4...20 mA = 0...150 °C
Switch 3L/4L (SS2) according to used sensor (3-wire or 4-wire).	

Page: ConF

A.oFF	0	0 Display offset e.g. for wire compensating
End, if no output is needed.		
SA.b	1	Output 4...20 mA
SA.An	0	Displayed value by 4 mA
SA.En	150	Displayed value by 20 mA

Level detection in linear tanks e. g. with NSL-...

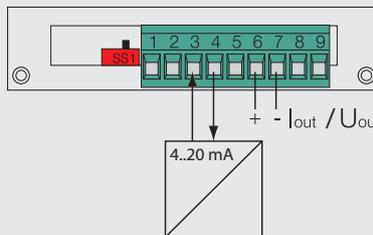

Connection:	see page 2
Adjustment:	4...20 mA = 0...180 m³
Analog output:	4...20 mA = 10...170 m³

Page: ConF

S.InP	4-20	Signal Input 4...20 mA
A.dP	111.1	Decimal point on digit
A.An	0	Displayed value 4 mA
A.En	180	Displayed value 20 mA
A.oFF	0	Display offset

End, if no output is needed.

SA.b	1	Output 4...20 mA
SA.An	10	Displayed value 4 mA
SA.En	170	Displayed value 20 mA

Specified usage

- Indicating and transforming of process values like:
current, voltage, temperature- or potentiometer signals

Features

- Completely programmable via key pad
- Free scalable display range
- Integrated sensor supply (GS version)
- Unit symbol changeable (illuminated)
- Alarm modul: 2 or 4 alarm relays available (option)
- Analog output: (0/4...20 mA, 0...10 V DC) (option)

DPM | Universal indicator 4-digit**Specified usage**

- On-site indicating of process value

Features

- No power supply needed, operating in 4...20 mA current loop
- Less wiring
- Sturdy and industrial proofed stainless steel housing, IP 69 K
- Display range and decimal point free programmable
- Ambient temperature up to 70 °C / 158 °F
- Version with 2-wire transducer for Pt100 available

Notes

Order code	
DPM	W x H: 96 x 48 mm
	Input
	GS 0/4...20 mA, 0...1/10 V
	special special input for GS
	PT Pt100 3/4-wire
	P05 potentiometer 3-wire, 0.1...0.5 kΩ
	P10 potentiometer 3-wire, 0.5...10 kΩ
	Alarm output
	0GW no alarm output relay
	2GW 2 alarm output relays
	4GW 4 alarm output relays
	Analog output
	X without analog output
	SPA with analog output 0...10 V
	SA with analog output 0/4...20 mA
	Display range
	X input GS, P05/P10: free adjustable between -1999...9999, input PT: -200.0...600.0 °C
	xxx...yyy factory-made adjustment according to specification
	Units
	°C, °F, %, m ³ , l/min, mA, bar, others on request
	Supply
	230VAC supply 230 V AC
	24VDC supply 24 V DC
DPM /	GS / 4GW / SA / 10...30 / bar / 230VAC

Transport/storage



- Use suitable transport packaging only to avoid damage of the equipment!
- No outdoor storage
- Store dry and dust free
- Not exposed to corrosive media
- Protect against solar radiation
- Avoiding mechanical shock and vibration
- Storage temperature -20...70 °C / -4...158 °F
- Relative humidity maximum 95 %

Disposal



- Electrical devices should not be disposed of with household trash. They must be recycled in accordance with national laws and regulations.
- Take the device directly to a specialized recycling company and do not use municipal collection points.

Cleaning



The device may only be wiped down with a dry cloth.