

Climatic Independent Level Sensor LAR



Application / Specified usage

- Hydrostatic level measurement in humid ambience
- Special applicable for exterior storage vessels

Application examples

- Level measurement in cooled milk vessels
- Hydrostatic level measurement at bottom side of vessel
- Difference pressure measurement with **2x LAR** and evaluation device
- Measurement up to 130 °C (266 °F) medium temperature

Hygienic design / Process connection

- Hygienic process connection with CLEANadapt
- Versions available to conform to 3-A Standard 74-
- All wetted materials are FDA-conform
- Sensor completely made of stainless steel
- Complete overview of process connections: see order code
- The Anderson-Negele CLEANadapt system offers a flow-optimized, hygienic and easily sterilizable installation solution for sensors.

Features / Advantages

- CIP-/SIP-cleaning up to 140 °C (284 °F) / max. 30 min
- Protection class IP 69 K (with cable connection)
- Measurement cell without any contact to atmosphere, fully closed measurement system**
- No drift problems caused by condensation
- Very high accuracy and long term stability
- Oil filling, FDA approved
- Factory or field calibration
- Integrated two-wire measurement transducer 4...20 mA
- 3 years warranty**
- Front-flush stainless steel sensor cell


Options / Accessories

- Special pressure ranges, specific pressure calibration ex works
- Electrical connection with M12 plug-in connector
- Preassembled cable for M12 plug-in connector

Measuring principle

The pressure sensor utilizes an internal piezoelectric transducer to convert the mechanical pressure into a corresponding mV signal. The mV signal then passes through custom linearization and conditioning circuitry. The resulting signal is an industry standard 4...20 mA, according to the specified range. In addition, onboard circuitry handles temperature compensation to ensure a stable reading during all phases of operation.


Communication

 4...20 mA

LAR-761



Measuring principle

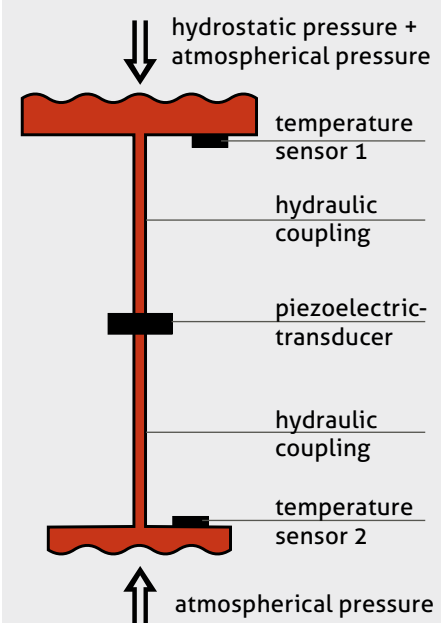


Specification		
Pressure ranges, standard	relativ	0...0.35 / 1.0 / 2.0 / 3.3 / 4.0 bar
Over-range rating	factor	2 times base range
Process connection	LAR-361: CLEANadapt LAR-761: DIRECTadapt	thread G1" sensor, combined with Negele process connection CLEANadapt torque max. 20 Nm Tri-Clamp 1½" or 2", DRD, SMS 38, Dairy flange DN40/50, Endress+Hauser Uni 65/85, Hengesbach PZV/VZR series
Materials	connector head thread connection diaphragm oil filling	Stainless steel AISI 316 / 1.4305, ø 2.59 in / 66 mm Stainless steel AISI 316L / 1.4404 Stainless steel AISI 316L / 1.4404, R _a < 0.4 µm medical white oil, FDA approval number 21CFR172.878, 21CFR178.3620, 21CFR573.680
Temperature ranges	ambient process compensated CIP-/SIP-cleaning	-10...50 °C / 14...122 °F -20...130 °C / -4...266 °F -20...120 °C / -4...248 °F 140 °C / 284 °F max. 30 minutes
Temperature compensation time	t ₉₀	30 s/10 K
Accuracy	hysteresis linearity reproduceability	≤ 0.075 % of full scale ≤ 0.05 % of full scale ≤ 0.075 % of full scale
Temperature drift	zero span	< 0.04 % of full scale/K < 0.04 % of full scale/K
Electrical connection	cable gland cable connection	M16x1.5 M12 connector AISI 304 / 1.4301 (option)
Protection class		IP 67 (with cable gland) IP 69 K (with M12 connector)
Supply voltage		12...40 V DC
Output	2-wire current loop	analog 4...20 mA short circuit proof
Max. loop resistance (not incl. LAR)	power supply 18 V DC 24 V DC 40 V DC	max. resistive load 300 Ω 600 Ω 1200 Ω
Weight		approx. 1050 g


Pressure ranges

Type	min. operation range	max. operation range	over-range rating
LAR-x61 / 0	0...0.1 bar	0...0.35 bar	0.6 bar
LAR-x61 / 1	0...0.35 bar	0...1.0 bar	2.0 bar
LAR-x61 / 2	0...1.0 bar	0...2.0 bar	4.0 bar
LAR-x61 / 3	0...2.0 bar	0...3.3 bar	6.6 bar
LAR-x61 / 4	0...3.3 bar	0...4.0 bar	8.0 bar

LAR-361 | G1" CLEANadapt

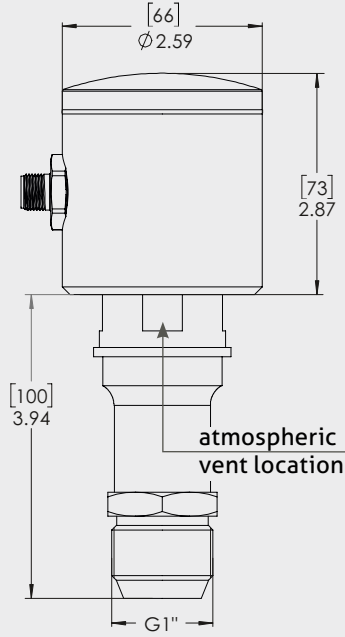


LAR-761 | Dairy flange DIN 11851

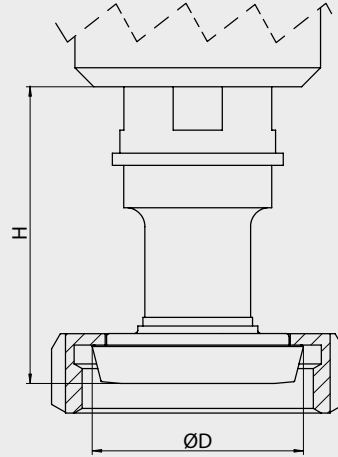

DIN 11851 size

Type	H [mm / inch]	Ø D [mm / inch]
DN40	75.7 / 2.98	55.9 / 2.20
DN50	77.0 / 3.03	68.5 / 2.70


LAR-761 | Tri-Clamp

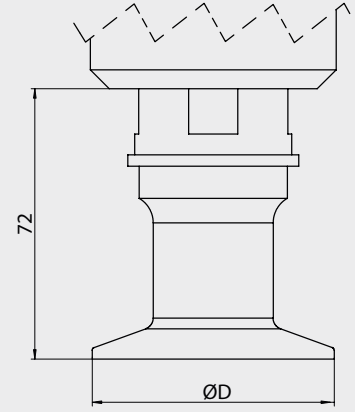


Tri-Clamp size

Type	Ø D [mm / inch]
TC1	50.5 / 1.99
TC2	64.0 / 2.52


LAR-761 | Endress+Hauser (EHS)

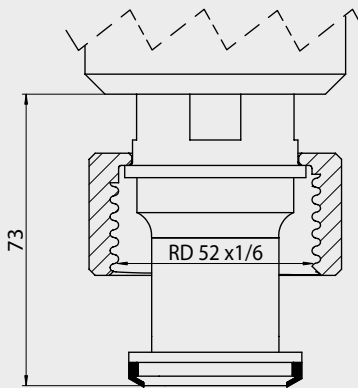


LAR-761 | Endress+Hauser (EHL)

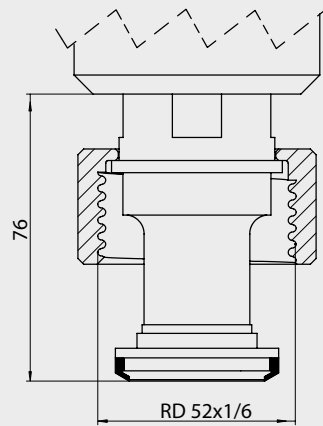


LAR-761 | HPV

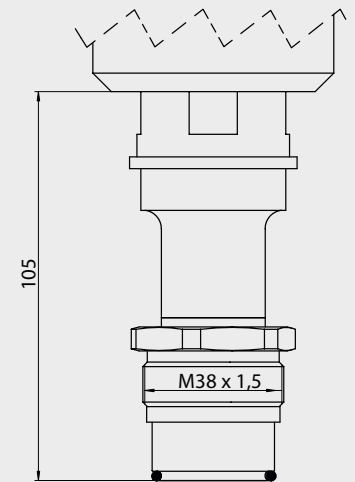

LAR-761 | DRD-65

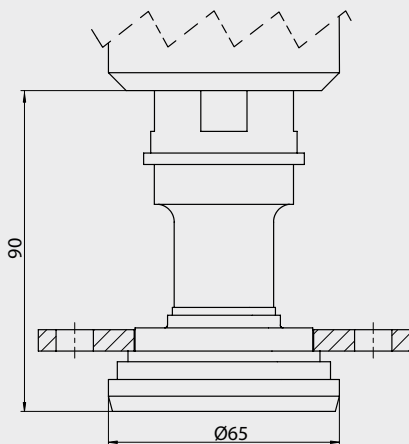

LAR-761 | SMS 38

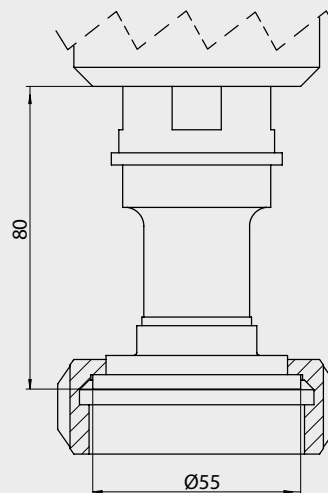


Mechanical connection / Installation




- Pay attention to the maximum tightening torque of 20 Nm if using Negele CLEANadapt system!
- Pay attention to remain open the 4 ports of atmospheric vent location.

Electrical connection

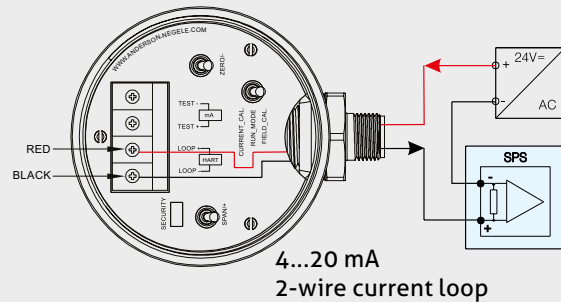

With M12-plug

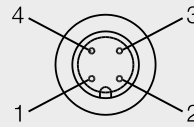

Configuration M12-plug

- 1: supply +24 V DC
- 2: output 4...20 mA
- 3: not connected
- 4: not connected

Start up




- Connect the sensor with power supply (12...36VDC) -> see "electrical connection LAR".
- The sensor is now ready for use.
- At standard factory-setting 0...100 % of the full range are equivalent to 4...20 mA of the current output.
Example: LAR-xxx/1 = 0...1 bar -> 0 bar = 4 mA; 1 bar = 20 mA
- In case of specific factory calibration the customized measurement range is equal to 4...20 mA of the current output.
Example: LAR-xxx/1 calibrated to 0...0.8 bar -> 0 bar = 4 mA; 0.8 bar = 20 mA
- Calibration is on-site customizable for special measurement tasks.
- Settings of ZERO (4 mA) and SPAN (20 mA) are non-interactive, having no effect on each other.

Empty adjustment (with empty vessel)

- After mounting an empty adjustment is **strongly recommended**, because mounting position can affect the ZERO setting.
- Empty vessel completely (no pressure or product on diaphragm, vessel is vented to atmosphere)
- Switch in position "RUN MODE"
- Actuate key switch "ZERO" for 5 seconds
- Empty adjustment is done.
- Output current is 4 mA.
- For maximum accuracy we advice an empty adjustment one more time after 3 weeks.
- After that an annually empty adjustment is recommended.


Empty adjustment

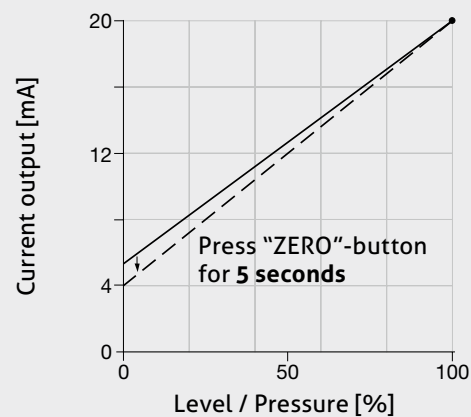

1. Full adjustment (with filled vessel utilizing level in vessel)

- Fill vessel to desired maximum level
- Please pay attention that hydrostatic pressure must be between min. and max. range of sensor (see table of pressure ranges page 2).
- Switch in position "RUN MODE"
- Actuate key switch "SPAN" for 5 seconds
- Full adjustment is done.
- Output current is 20 mA


Full adjustment

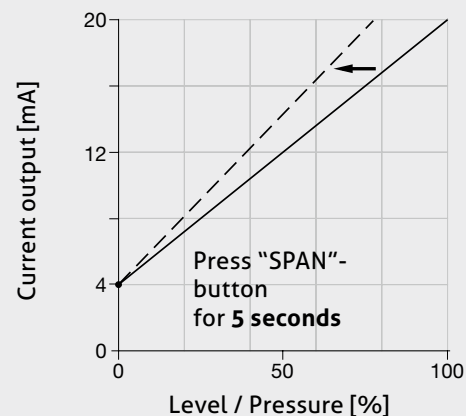

2. Utilizing on-board setup

If "wet calibration" (by vessel filling) is not possible, full adjustment can be done by on-board setup. First of all, the desired range (full value) must be calculated to a corresponding current value. Afterwards, the calculated current will be adjusted by multimeter to perform new calibration. In the following, a current calibration procedure is described as an example.

Calibration hookup

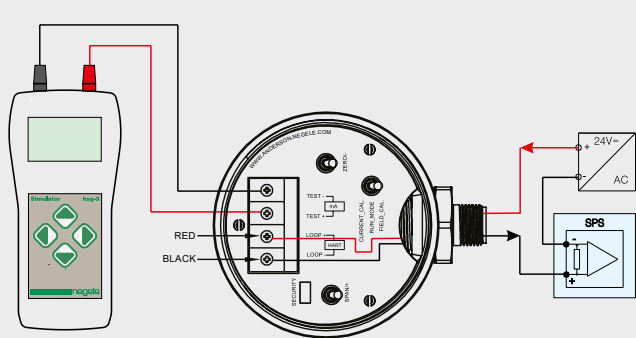

Multimeter

4...20 mA
2-wire current loop

LAR calibration values

Type	Base range in bar	Upper linearization value in bar	Current CAL at base range in mA
LAR- χ 61/0	0.35	0.3612	19.50
LAR- χ 61/1	1.00	1.0462	19.29
LAR- χ 61/2	2.00	2.0799	19.39
LAR- χ 61/3	3.30	3.4623	19.25
LAR- χ 61/4	4.00	4.0228	19.91

2.1 Calculating the current to adjust

For calculating the current to adjust the "upper linearization value" is needed (see table calibration values). This linearization value is greater than the base range. LAR needs this value to calculate the characteristic line.

Calculation formula:

$$((\text{desired range} / \text{upper linearisation value}) \times 16) + 4 = \text{current to adjust}$$

Example:

LAR-361/1 needs to be calibrated to 0.8 bar: $((0.8 / 1.0462) \times 16) + 4 = 16.23 \text{ mA}$


2.2 LAR adjustment

- Connect LAR with power supply -> see figure calibration hookup above.
- Perform meter hookup with test points (setting mA/DC).
- Set MODE SWITCH to "FIELD CAL".
- Meter output will automatically move to 19.99 mA – LAR is waiting for entry of new calibration range.
- Using the switches "SPAN" and "ZERO", raise or lower the current until the calculated value (see above) has been reached. (The longer the switches are pressed the faster changes the current value.)
- Once the proper value has been reached, simultaneously depress both the "SPAN" and the "ZERO" switch for one second – this will lock in new sensor calibration.
- Place MODE SWITCH in "CURRENT CAL" position and verify meter is reading calculated value. (When switching to "CURRENT CAL" position, current output is equal to actual calibration).
- Set MODE SWITCH to "RUN MODE"
- LAR is now ready for use with new calibration setting.


2.3 Reset to factory setting

If factory reset to base range is needed, perform calibration shown in procedure 2.2 and adjust current acc. to table "LAR calibration values" (CURRENT CAL at base range).

Hydrostatic Level Measurement and Linearization with external evaluation device

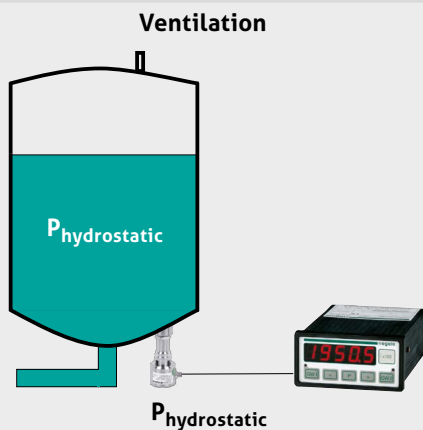

Difference Pressure Measurement and Linearization with 2 x LAR and external evaluation device

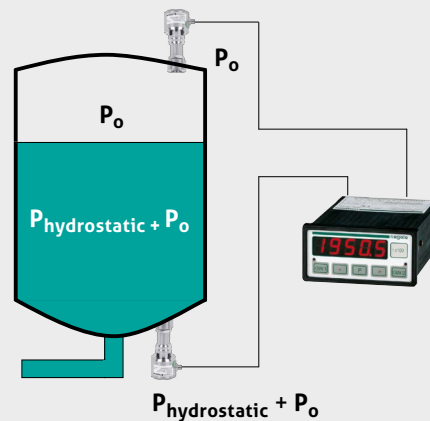

$$P_{\text{difference}} = (P_{\text{hydrostatic}} + P_o) - P_o$$

$$P_{\text{difference}} = P_{\text{hydrostatic}}$$

Advice for differential pressure measurement in pressurized vessels



$$P_o < 4 \times P_{\text{hydrostatic}}$$

To guarantee a stable differential pressure measurement in pressurized vessels the overpressure must not be higher than 4 times of the hydrostatic pressure!

Cleaning



- Cleaning with fluids does not effect operation
- Metal diaphragm (process and reference) mustn't be cleaned mechanically
- In case of using pressure washers, don't point nozzle directly to electrical connection or reference diaphragm (atmospheric vent location)!
- In case of inside cleaning with pressure washers, don't point nozzle directly to the diaphragm!

Note on CE



- Applicable directives: Electromagnetic Compatibility Directive 2014/30/EU
- Compliance with the applicable EU directives is identified by the CE label on the product.
- The operating company is responsible for complying with the guidelines applicable to the entire installation.

Conventional Usage



- Not suitable for applications in explosive areas.
- Not suitable for applications in security-relevant equipments (SIL).

Reshipment



- Sensors shall be clean and must not be contaminated with dangerous media! Note the advice for cleaning!
- Use suitable transport packaging only to avoid damage of the equipment!

Transport / Storage



- No outdoor storage
- Dry and dust free
- Not exposed to corrosive media
- Protected against solar radiation
- Avoiding mechanical shock and vibration
- Storage temperature 0...40 °C / 32...104 °F
- Relative humidity max. 80 %

Disposal



- Electrical devices should not be disposed of with household trash. They must be recycled in accordance with national laws and regulations.
- Take the device directly to a specialized recycling company and do not use municipal collection points.



Troubleshooting	
Symptom	Action
1. No output current (0 mA) in any Mode.	Loop may be broken - Measure voltage across LOOP+ and LOOP- terminals. If not between 12...40 V DC, check connector and external loop wiring. Check if mA fuse in DMM is blown. This frequently occurs during testing.
2. Current output less than 4 mA and does not increase with level, or if mode switch set to „FIELD CAL“.	Connect milliammeter across LOOP+ terminal and TEST-testpoint. If loop now works, sensor circuitry has been damaged. Contact factory.
3. Output stuck between 4 and 20 mA	Verify that MODE switch is in RUN mode. Empty vessel and perform Sensor Rezero procedure as described on page 4.
4. Performing sensor rezero procedure does not return output to 3.96...4.04 mA	Verify that CUR CAL output is between 7.2 and 20 mA. If current is less than 4 mA, follow instructions for Symptom No. 2. If current is greater than 4 mA, sensor is damaged. Contact factory.
5. Sensor output is not stable. 6. Output drifts over time.	Verify that CUR CAL value is between 7.2 and 20 mA. Check for signs of moisture or water in housing. Contact factory.
7. Sensor mA output not as expected for specified level. 8. Output signals are not accurate.	Perform Sensor Rezero procedure when vessel is empty. Afterwards repeat the full adjustment.
9. Sensor output signal is greater than 20 mA.	Sensor may have been zeroed with product in the vessel. Perform Sensor Rezero Procedure as described on page 4. Sensor maybe over-ranged. Verify CUR CAL value, and that it is appropriate for the application. Contact factory for assistance.
10. Sensor output does not increase with the level, but does increase to 20 mA if mode switch set to „FIELD CAL“.	Sensor may have been dropped or over-ranged and permanently damaged. Contact factory for assistance.

Note on 3-A Sanitary Standard 74-



Information on installation according to 3-A standard is available on our website:
www.anderson-negele.com/3A74.pdf

Click on the PDF icon to download the document.

Overview of possible process connections for LAR-361.

The complete overview of all available adapters you will find at product information CLEANadapt.

LAR-361					
Process connection	Build-in system EHG (DIN 11850 series 2)	Negele weld-in sleeve	Dairy flange (DIN 11851)	Varivent	

Order Code

LAR-361 Climatic independent level sensor, process connection CLEANadapt G1"
LAR-761 Climatic independent level sensor, process connection DIRECTadapt

Measuring range (relative)

0	0...0.35 bar
1	0...1.0 bar
2	0...2.0 bar
3	0...3.3 bar
4	0...4.0 bar

Process connection - only for LAR-761 (Ⓐ: 3-A conform)

TC1	Tri-Clamp 1½" Ⓐ
TC2	Tri-Clamp 2" Ⓐ
D40	Dairy Flange DIN 11851 DN40
D50	Dairy Flange DIN 11851 DN50
DRD	DRD Flange 65 mm
SM3	SMS 38 mm with union nut
EHL	Endress+Hauser universal adapter Uni 65 6" D85
EHS	Endress+Hauser universal adapter Uni 65 / Uni 85
HPV	HENGESBACH PZM/VRM series

Range adjustment ex works

X	No adjustment
[end value]	Please specify required range in "bar"

Electrical connection

X	Cable gland
M12	M12-plug
99	Adaptor 1/2" NPTF

Cap

P	Plastic, opaque
S	Stainless steel

LAR-761 / 1 / TC1 / 0.5 / M12 / P

Accessories

PVC-cable with M12 connection, brass nickel-plated, IP69K, shielded

M12-PVC/5G-8m	5 pin, length 8 m
M12-PVC/5G-15m	5 pin, length 15 m
M12-PVC/5G-30m	5 pin, length 30 m

4600300007	Plastic Cap, grey
5632900001	Stainless Steel Cap
SP5633200000	1/2" NPTF Adaptor

M12-EVK M12 plug-in screw cap, 1.4305 / AISI 303, with o-ring, as a protection against humidity and dirt

CERT / 2.2 / LAR factory certificate 2.2 acc. to EN10204 (only product contacting surface)

CAL / LAR factory calibration certificate with 3 calibration points

M12 plug-in screw cap

